


Picture 2. (Front unit)

This picture is taken from the inside of the front unit of the CELLmatic 1502 after the CELL 502 CPU is mounted.

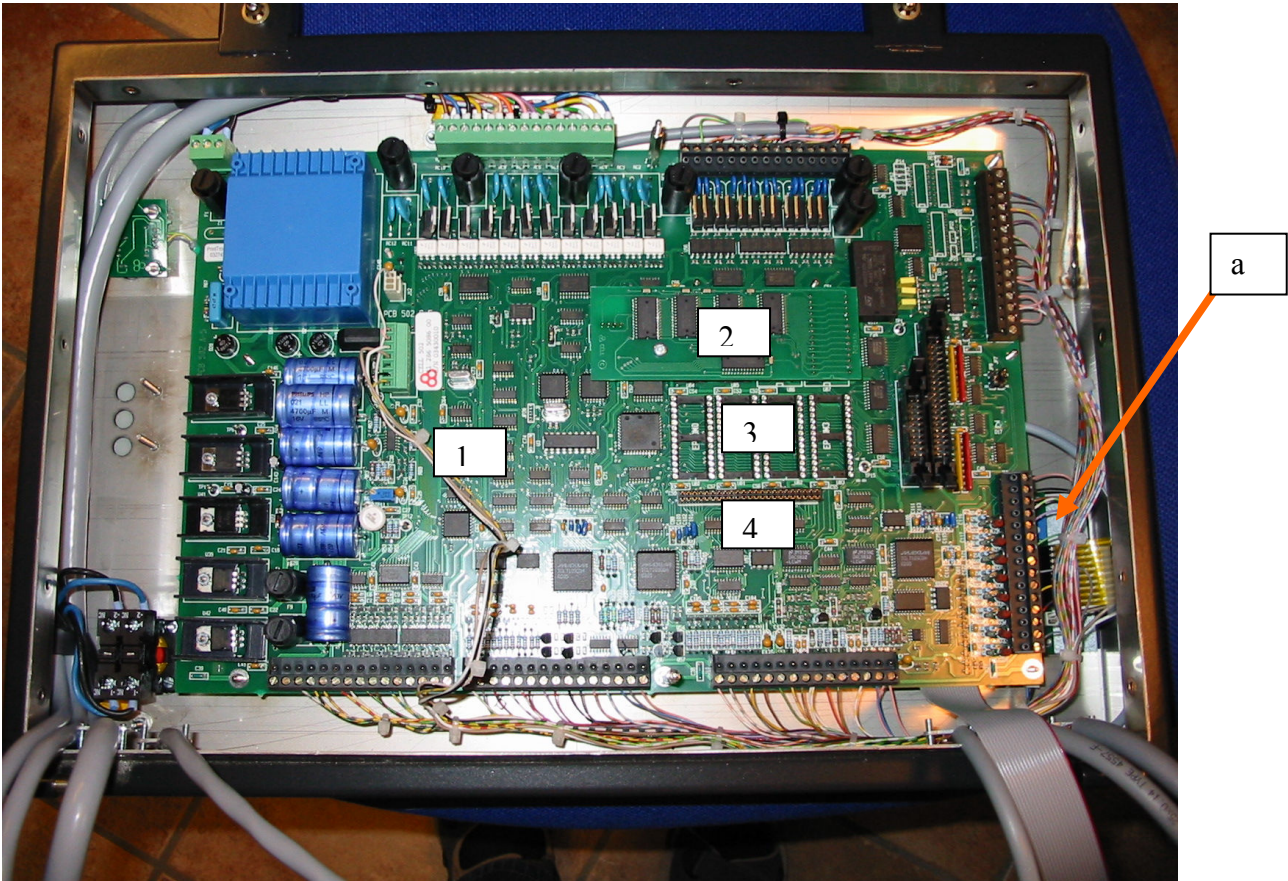

- 1) CELL 502 CPU board (SN 41 286 5086 00) with all the I/O socket connectors connecting the top and the back unit.
- 2) CELL 585 RAM extension card (SN 41 286 5585 00). The CELL 585 is included in the CELL 502 CPU board (SN 41 286 5086 00).
- 3) Socket for the EPROM numbered 0, 1, 2 and 3 from the left.
- 4) Socket for the CELL 566 (SN 41 286 5100 00) communication card interfacing to the PROFI network.

Intensity of display (red arrows).

Arrow a):

Underneath the CELL 502 printed board at the red arrow find you a small screw potentiometer were there by a screwdriver can be done an adjustment of the intensity of the display. **Be carefully not to make any short connections with the screwdriver!**