



13. December 2018

How to Check the Battery backup.

All You need to do is:

1. Measure on the CELL 590 I/O board, (see the below pictures)
2. There must be minimum 5.23Vdc (Charger Voltage)
3. Dismount the 230Vac power supply to the CELLmatic 1502.
4. Wait for 5-10 min.
5. Measure on the CELL 590 I/O board, (see the below pictures)
6. There must be minimum 4.90Vdc (Backup Voltage)

If not minimum 5.23Vdc, under point 2.

There can be a fault at cable set between front and bottom part, or on the battery charger inside front part, at the CELL 502 CPU Board. (Sent the CELLmatic 1502 Part to Us, and We will repair it.)

If minimum 4.90Vdc, under point 5.

There can be a fault at battery Pack. (Buy a new Battery Backup Pack)



And we do have all the, parts on Stock, at our Warehouse.

